
Induction hob

Electrolux LIL63441

Model and controls

Electrolux LIL63441 · PNC 949 599 183. 59 × 52 cm; 4 induction zones; Bridge; SliderTouch; maximum connected power 4.6 kW.

The numbered diagram follows the order and functions of the original Electrolux control panel; its positions are simplified. The scale selects levels 1-14 or P.

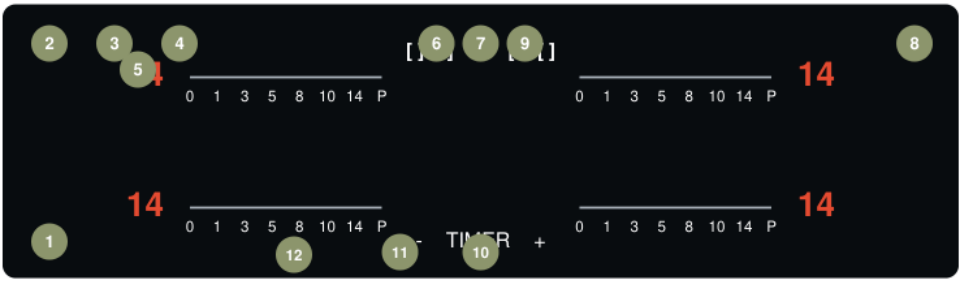

Model and controls

1	On/Off - switch the hob on or off.
2	Lock / child lock - lock controls or activate child protection.
3	Pause - temporarily reduce all active zones to level 1.
4	Bridge - combine the two left zones.
5	Heat-setting display - shows the level.
6	Timer zone indicators - show which zone the timer applies to.
7	Timer display - time in minutes.
8	Hob2Hood - manual control of a compatible hood.
9	Zone selection - assign the timer to a zone.
10	Timer + / - - adjust the timer.
11	PowerBoost - brief maximum extra power.
12	Setting scale - select 1-14 or P directly.

Cook in four steps

1. Centre an induction-compatible pan on the chosen zone. A magnet should stick to its base.

2. Touch On/Off for about 1 second.

3. Tap or slide along the desired zone’s scale to select level 1-14.

4. Set the zone to 0, or turn off the whole hob with On/Off.

1-3	Melting / keeping warm
3-5	Rice, milk dishes, reheating
5-7	Steaming vegetables, fish, meat
7-9	Potatoes, soups, larger quantities
9-12	Normal frying
12-13	Searing / steak
14	Boiling water / pasta / vigorous frying
P	PowerBoost - very fast heating

Zones and Bridge

Bridge is available only on the left-hand pair.

Front left: 21 cm, 2300 W; PowerBoost 3200 W for up to 10 minutes.
Rear left: 21 cm, 2300 W; PowerBoost 3200 W for up to 10 minutes.

Rear right: 18 cm, 1800 W; PowerBoost 2800 W for up to 8 minutes.
Front right: 14.5 cm, 1400 W; PowerBoost 2500 W for up to 4 minutes.

Bridge: place large cookware over the centres of both left zones. First select a level for one left zone, then touch Bridge. Both zones operate as one cooking area. Touch Bridge again to end.

PowerBoost, Pause and automatic heating

PowerBoost: touch P for the desired zone for rapid heating. Afterwards the zone returns automatically to level 14. Maximum durations: left zones 10 minutes each; front right 4 minutes; rear right 8 minutes.

Pause: touch Pause to reduce all active zones to level 1 and lock the other controls. Touch Pause again to restore previous settings. Timers continue running.

Automatic heating: a cold zone starts at high power and then switches to the selected cooking level. Available only when the zone is cold.

When total demand reaches the configured power limit, the hob automatically shares available power. A display may alternate between the selected and reduced levels. This is normal.

Timer, lock and residual heat

Select cooking power on the slider; set the timer using zone selection and +/-.

Countdown: set a cooking level; touch timer zone selection until the desired zone is indicated; set 00-99 minutes with +/-. At 00, a signal sounds and that zone switches off.

Control lock while cooking: after choosing the level, touch Lock to prevent accidental changes. The timer stays active. Touch again to unlock.

Child lock: switch the hob on without selecting a cooking level; hold Lock for 4 seconds; switch the hob off. Repeat the same procedure to deactivate permanently.

OptiHeat Control has three residual-heat levels: continue cooking / keep warm / residual heat. Whenever a residual-heat indicator is on, there is a risk of burns.

Cookware, cleaning and Hob2Hood

Suitable cookware: cast iron, steel, enamelled steel and suitable stainless steel. If a magnet sticks to the base, the pan is generally suitable. Use a base that is as flat, clean and dry as possible.

Recommended pan-base diameters: left zones 125-210 mm; front right 125-145 mm; rear right 145-180 mm.

After use, let the hob cool and clean with a soft damp cloth. Remove sugar, melted plastic and foil immediately with a suitable ceramic-hob scraper.

Hob2Hood works only with a compatible Electrolux hood. Infrared communication lets the hood control lights and fan automatically. The existing hood in Tavernola must be explicitly Hob2Hood-compatible; compatibility is not assumed.

Troubleshooting and technical data

No response: no level selected within 10 seconds; wet/covered controls; Pause active.

Pan symbol / no heating: pan missing, unsuitable or too small. Use another induction-compatible pan.

Level alternates: the power limit is sharing total available power; not a fault.

E + number: fault. Switch off, disconnect from power for 30 seconds and restart; contact service if it recurs.

Hob2Hood does not respond: check that the controls and line of sight are clear and that the hood is compatible.

Technical data: PNC 949 599 183; 590 × 520 mm; 4 induction zones; maximum connected power 4600 W; configurable limits 1.5 / 2.0 / 2.5 / 3.0 / 3.5 / 4.0 / 4.6 kW; SliderTouch / Direct Access; Bridge on the two left zones; Hob2Hood with a compatible hood.

Source: Electrolux LIL63441 product page and official German Electrolux instructions; source reference dated 13 October 2026.